



# BAT ACCESS FITTING INSTRUCTIONS

Consult your ecologist as to whether to allow bat access into the roof space or the batten cavity (if roof space membrane will need to be cut)

STEP 1- DETERMINE POSITION OF BAT ACCESS BETWEEN RAFTERS

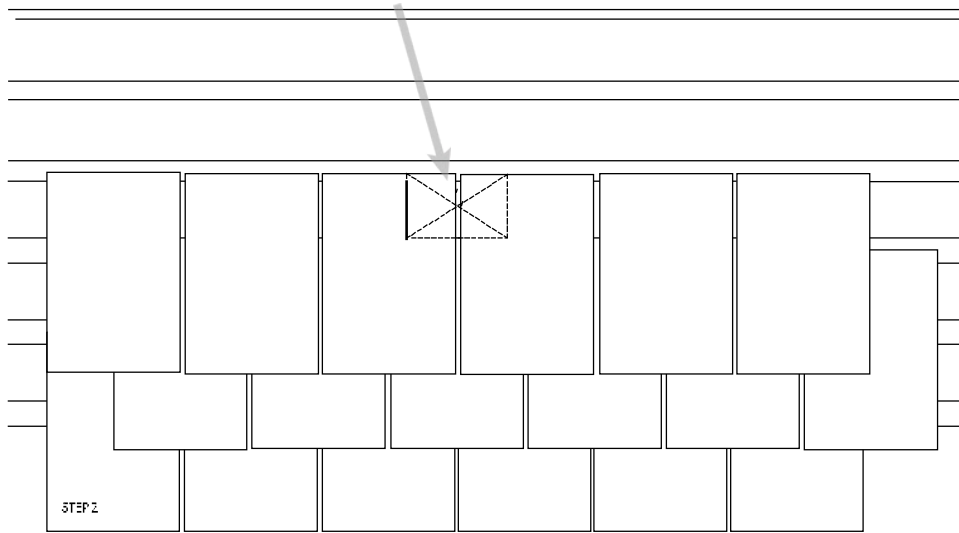


STEP 3 - POSITION UNIT AND SECURE BY NAILING THROUGH THE FLANGE

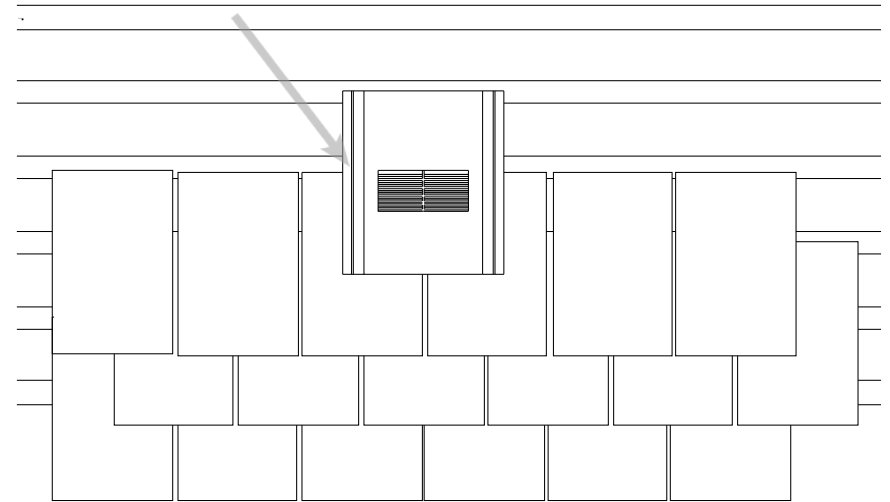

STEP 2

CUT AND REMOVE BATTEN 225mm WIDE

REMOVE & TRIM SLATES AS SHOWN  
THEN REFIX SLATES

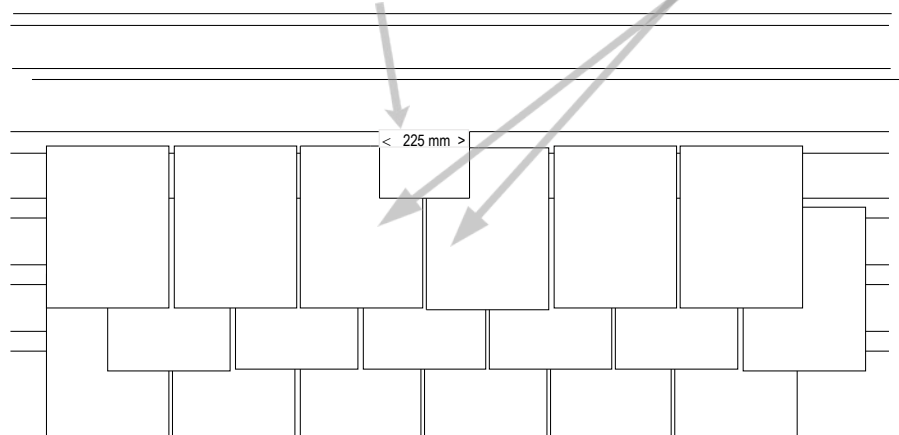

STEP 4 - TRIM SLATES AROUND THE COWL ACCESS POINT

